



**uni jet**

**ИБП Newave Powervalue 11/31 (7,5-20 кВА) - руководство по эксплуатации. Юниджет**

Постоянная ссылка на страницу: <https://www.uni-jet.com/catalog/ibp/on-line-ibp/abb-powervalue-11-31/>



# User Manual

## POWERVALUE™ 11 and 31

Single-phase UPS System  
7.5 - 20kVA



CABINET A



CABINET B



CABINET C

# CONTENTS

<b>1</b>	<b>SAFETY .....</b>	<b>4</b>
<b>2</b>	<b>DESCRIPTION.....</b>	<b>5</b>
2.1	RELIABILITY AND QUALITY STANDARDS.....	5
2.2	POWERVALUE MODELS.....	5
2.3	WARRANTY.....	5
2.4	EXTENDED WARRANTY.....	6
<b>3</b>	<b>INSTALLATION.....</b>	<b>7</b>
3.1	INTRODUCTION.....	7
3.1.1	Receipt of the UPS .....	7
3.1.2	Nameplate.....	7
3.2	UNPACKING .....	7
3.3	BATTERIES .....	7
3.4	STORAGE.....	8
3.4.1	UPS.....	8
3.4.2	Battery.....	8
3.5	POSITIONING.....	8
3.6	CABLING.....	9
3.6.1	Cabling of POWERVALUE 7.5, 10 and 12kVA with SINGLE PHASE INPUT.....	9
3.6.2	Connection Diagram .....	9
3.6.3	Preparation for the Input Cabling.....	9
3.6.4	Earthing.....	9
3.6.5	Connection of the Mains Supply.....	10
3.6.6	Single Input Feed.....	10
3.6.7	Dual Input Feed .....	11
3.6.8	Preparation for the Output Cabling.....	11
3.6.9	Connection of the Load.....	11
3.6.10	Output Cabling.....	12
3.6.11	How to fix the POWERVALUE to the floor.....	12
3.6.12	Cabling of POWERVALUE 7.5, 10, 12, 15 and 20kVA with THREE PHASE INPUT .....	14
3.6.13	Connection Diagram.....	14
3.6.14	Preparation for the Three Phase Input Cabling.....	14
3.6.15	Earthing .....	14
3.6.16	Connection of the Mains Supply.....	15
3.6.17	Single Input Feed .....	15
3.6.18	Dual Input Feed .....	15
3.6.19	Preparation for the Output Cabling3.....	16
3.6.20	Connection of the Load .....	16
3.6.21	Output Cabling.....	17
3.6.22	How to fix the POWERVALUE to the floor.....	17
3.7	CONNECTION OF EXTERNAL BATTERIES FOR UPS POWERVALUE .....	20
3.8	INTERFACING.....	21
3.8.1	SMART PORT (Serial RS 232).....	21
3.8.2	DRY PORT (volt-free contacts).....	22
<b>4</b>	<b>OPERATION.....</b>	<b>23</b>
4.1	COMMISSIONING .....	23
4.2	CONTROL PANEL.....	23
4.2.1	Power Management Display (PMD) .....	23
4.2.2	LED Indicators .....	24
4.2.3	Keys .....	24
4.2.4	ON/OFF Start-up and Shutdown Buttons.....	25
4.3	DESCRIPTION OF THE LCD .....	26
4.3.1	Status Screens.....	26

4.3.2	Main Menu Screen.....	26
4.3.3	Event Log Screen .....	26
4.3.4	Measurements Screen.....	26
4.3.5	Commands Screen .....	27
4.3.6	UPS Data .....	27
4.3.7	Set-Up User .....	27
4.3.8	Set-Up Service .....	28
4.4	OPERATING MODES .....	29
4.4.1	Mode "ON LINE" (INVERTER MODE) .....	29
4.4.2	Mode "OFF-LINE" (ECO- or BYPASS MODE) .....	29
4.4.3	"MAINTENANCE BYPASS" - Mode.....	30
4.5	START-UP PROCEDURE .....	31
4.6	SHUTDOWN PROCEDURE .....	33
4.7	LOAD TRANSFER: FROM INVERTER OPERATION TO MAINTENANCE BYPASS.....	34
4.8	LOAD TRANSFER: FROM MAINTENANCE BYPASS TO INVERTER OPERATIONS.....	35
<b>5</b>	<b>MAINTENANCE .....</b>	<b>36</b>
5.1	INTRODUCTION .....	36
5.2	USER RESPONSIBILITIES .....	36
5.3	ROUTINE MAINTENANCE .....	36
5.4	BATTERY TEST.....	36
<b>6</b>	<b>TROUBLESHOOTING .....</b>	<b>37</b>
6.1	ALARMS.....	37
6.2	MENU, COMMANDS, EVENT LOG, MEASUREMENTS, .....	37
6.3	FAULT IDENTIFICATION AND RECTIFICATION.....	37
<b>7</b>	<b>OPTIONS .....</b>	<b>38</b>
7.1	INTRODUCTION .....	38
7.2	REMOTE EMERGENCY FACILITIES .....	38
7.3	REMOTE SIGNALLING PANEL (RSP).....	39
7.3.1	How to Connect the Remote Signaling Panel (RSP).....	40
7.4	GENERATOR ON FACILITIES.....	40
7.5	WAVEMON SHUTDOWN AND MANAGEMENT SOFTWARE .....	41
7.5.1	Why is UPS Management important?.....	41
7.5.2	Wavemon Shutdown and Monitoring Software.....	41
7.6	SNMP CARD/ADAPTER FOR NETWORK MANAGEMENT /REMOTE MONITORING .....	43
<b>8</b>	<b>TECHNICAL SPECIFICATIONS.....</b>	<b>44</b>

# 1 Safety



**BEFORE ATTEMPTING TO INSTALL OR START UP THIS UPS THE USER MUST ENSURE THAT THE SAFETY INSTRUCTIONS IN THIS MANUAL ARE CAREFULLY READ AND OBSERVED BY TECHNICALLY COMPETENT PERSONNEL. KEEP THIS MANUAL WITH THE UPS FOR FUTURE REFERENCE. THIS UPS MUST NOT BE STARTED UP OR PUT INTO USE WITHOUT HAVING BEEN COMMISSIONED BY A FULLY TRAINED AND AUTHORISED PERSON.**



**ALL SERVICING MUST BE PERFORMED ONLY BY QUALIFIED PERSONNEL. DO NOT ATTEMPT TO SERVICE THE UPS YOURSELF. BY OPENING OR REMOVING THE UPS-COVERS YOU RUN RISK OF EXPOSURE TO DANGEROUS VOLTAGES!**

**IN CASE OF ANY KIND OF DOUBT REGARDING THIS UPS, CONTACT:**

**■ NEWAVE SA, SWITZERLAND**

**Tel. +41 91 850 29 29**

**Fax. +41 91 840 12 54**

**e-mail: [info@newave.ch](mailto:info@newave.ch)**

**[www.newave.ch](http://www.newave.ch)**

**NEWAVE SA WILL ASSUME NEITHER RESPONSIBILITY NOR LIABILITY DUE TO INCORRECT OPERATION OR MANIPULATION OF THE UPS.**



**HIGH LEAKAGE CURRENT!  
MAKE SURE THAT THE EARTHING IS CARRIED OUT CORRECTLY BEFORE YOU CONNECT THE MAINS POWER SUPPLY!**



**THE POWERVALUE 7.5-20 kVA IS CLASS A - UPS-PRODUCT (ACCORDING TO EN 50091/Part-2). IN A DOMESTIC ENVIRONMENT IT MAY CAUSE RADIO INTERFERENCE. IN SUCH AN ENVIRONMENT THE USER MAY BE REQUIRED TO UNDERTAKE ADDITIONAL MEASURES.**

**NEWAVE S.A. HAS TAKEN EVERY PRECAUTION TO PRODUCE AN ACCURATE, COMPLETE AND EASY TO UNDERSTAND MANUAL AND WILL THEREFORE ASSUME NO RESPONSIBILITY NOR LIABILITY FOR DIRECT, INDIRECT OR ACCIDENTAL PERSONAL OR MATERIAL DAMAGE DUE TO ANY MISINTERPRETATION OR UNDESIRED MISTAKES IN THIS MANUAL.**

**THIS MANUAL MAY NOT BE COPIED NOR REPRODUCED PRIOR TO WRITTEN PERMISSION OF NEWAVE SA.**



**USER MUST HANG A WARNING LABEL ON ALL PRIMARY UPS POWER ISOLATORS. ELECTRICAL MAINTENANCE PERSONNEL SHOULD BE AWARE OF DANGEROUS VOLTAGES. THE WARNING LABEL SHOULD CARRY THE FOLLOWING WORDING: "ISOLATE UPS BEFORE WORKING ON THIS CIRCUIT"**

# 2 Description

## 2.1 RELIABILITY AND QUALITY STANDARDS.

Congratulation on your purchase of the **PowerValue™**.

The **PowerValue™** will provide your critical equipment with a steady and reliable power supply for many years.

NEWAVE SA is situated in Switzerland and is specialized in the design and manufacture of Uninterruptible Power Supplies.

The unique and modular UPS **PowerValue™** belongs to the newest generation of midrange 3phase UPS-Systems. High reliability, low operating cost and excellent electrical performance are only some of the highlights of this innovative UPS solution.

The criteria and methods implemented at NEWAVE SA for the design and manufacture correspond to the most stringent quality standards.

The Swiss Association for Quality and Management System (SQS) certified that, according to the model of the International Standard ISO 9001/EN 29001, the whole Newave SA company complies successfully. (Registration No.: 14879-01, date issued: 12 April 1999.)

## 2.2 POWERVALUE MODELS

The **PowerValue™** UPS series consists of:

Single Phase Input/Single Phase Output Models: 7.5, 10 and 12kVA

Three Phase Input/Single Phase Output Models: 7.5,10,15 and 20kVA

## 2.3 WARRANTY

The **PowerValue™** is supplied with a limited warranty that the UPS and its component parts are free from defects in materials for a period of 12 months from the date of original commissioning or 15 months from the date of original delivery, whichever is the sooner. Transportation cost is not included in the warranty and has to be paid by the end-user.

Do not return anything without written authorisation from NEWAVE or your closest service centre. NEWAVE or the closest service centre will then give you further instructions how to proceed.

Any product must be returned with transportation charges prepaid and must be accompanied by a description of the failure. Products without description will not be handled.

This warranty is invalidated if the UPS is put into use without having been commissioned by a fully trained and by NEWAVE authorised person.

This warranty does not apply to any damage or losses caused by misuse, abuse, negligence, neglect, unauthorised repair or modification, incorrect installation, inappropriate environment, accident, act of God or inappropriate application.

If the UPS fails to conform to the above within the warranty period then NEWAVE SA or an authorized service centre will, at its sole option, repair or replace the UPS or parts of it. All repaired or replaced parts will remain the property of NEWAVE or of the authorized service centre.

NEWAVE is not liable for any costs, such as loss of profits or revenue, loss of equipment, loss of data or software, cost of substitutes, claims by third parties or otherwise.

As general policy, NEWAVE does not recommend the use of any of its products in life support applications where failure or malfunction of the NEWAVE product can be reasonably expected to cause failure of the life support device or to significantly affect us safety or effectiveness. NEWAVE

does not recommend the use of any of its products in direct patient care. NEWAVE will not knowingly sell its products for use in such applications unless it receives in writing assurances satisfactory to NEWAVE that the risks of injury or damage have been minimized, the customer assumes all such risks and the liability of NEWAVE is adequately protected under the circumstances.



---

*The UPS may contain batteries that must be re-charged for a minimum of 24 hours every 6 months to prevent deep discharging. Batteries that have been, for whatever reason, deep discharged are not covered by the warranty.*

## **2.4 EXTENDED WARRANTY**

The standard warranty may be enhanced by protecting the UPS with an Extended Warranty Agreement (maintenance contract).

For more details please contact the nearest representative.

# 3 Installation

## 3.1 INTRODUCTION

This chapter contains all the necessary information for the correct unpacking, positioning, cabling and installation of the UPS **PowerValue™**.



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED PERSONNEL.**

**NEWAVE will take no responsibility for any personal or material damage caused by incorrect cabling or operations or activities, which are not carried out as per the instructions contained in this manual.**

### 3.1.1 Receipt of the UPS

Upon receiving the UPS, carefully examine the packing container and the UPS for any sign of physical damage. In case of rupture or suspect inform immediately:

- a) The carrier and
- b) NEWAVE SA.

Ensure that the received UPS corresponds to the material indicated in the delivery note.

The packing container of the **PowerValue™** protects it from mechanical and environmental damage. To increase its protection the UPS is wrapped with a plastic sheet.

### 3.1.2 Nameplate

The technical specifications of the **PowerValue™** are provided on the nameplate, which is situated at the front of the UPS. Check if it corresponds to the purchased material mentioned in the delivery note.

## 3.2 UNPACKING

When unpacking the UPS observe the "FRAGILE" and "ARROW" on the packing container.

Perform the following steps to unpack the UPS:

- Cut wrappers and remove packing container by pulling it upwards;
- Remove the plastic cover from the UPS;
- Remove pallet from the UPS;
- Retain the packaging materials for future shipment of the UPS;
- Examine the UPS for any sign of damage. Notify your carrier or supplier immediately if damage is apparent.

## 3.3 BATTERIES

The standard batteries of **PowerValue™** are sealed, maintenance-free batteries, internally mounted and will typically be connected when the UPS is commissioned.

The battery life depends very much on the ambient temperature. A temperature range between +18° and +23°C will achieve the optimum battery life.

If the UPS is delivered without batteries, NEWAVE is not responsible for any damage or malfunctioning caused to the UPS by incorrect wiring



### 3.4 STORAGE

#### 3.4.1 UPS

If you plan to store the UPS prior to use, keep the UPS unpacked in a dry, clean and cool storage room with an ambient temperature between (+5 °C to +40°C) and humidity of less than 90%.

If the packing container is removed protect the UPS from dust.

#### 3.4.2 Battery

The battery life depends very much on the ambient temperature.

It is therefore important not to store the battery longer than 6 months at 20°C, 3 months at 30°C and 2 months at 35°C storage temperature without a battery recharge.

For longer-term storage make sure that the battery is fully recharged every 6 months.

**SEALED BATTERIES MUST NEVER BE STORED IN A DISCHARGED OR PARTIALLY DISCHARGED STATE.**

**EXTREME TEMPERATURE, UNDER- AND OVERCHARGE AND OVERDISCHARGE WILL DESTROY BATTERIES!**

Before and after storing, charge the battery.

Always store the batteries in a dry, clean, cool environment in their original packaging.

If the packing container is removed protect the batteries from dust and humidity.

### 3.5 POSITIONING

The **PowerValue™** is a compact and light UPS and can easily be moved to the final position.

All parts of the **PowerValue™** are accessible from the front and rear making it a service-friendly and maintenance-friendly UPS.

The UPS should be located where:

- Humidity and temperature are within prescribed limits;
- Fire protection standards are respected;
- Cabling can be performed easily;
- Available front accessibility for service or periodic maintenance;
- Requested air cooling flow should be granted;
- The air conditioning system should have sufficient capacity;
- Dust or corrosive/explosive gases must be absent;
- The place is vibration free;
- Minimum 10cm rear space is recommended for accessibility (see Figure 3.1 and 3.2);
- Only front and rear access is necessary for service and maintenance.

Clearances	X
X (Rear )	100mm
Y (Right Side)	400mm

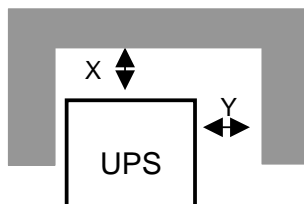


Figure 3.1: UPS space recommendation

Clearances	X
X (Rear )	100mm
Y (Right Side)	400mm

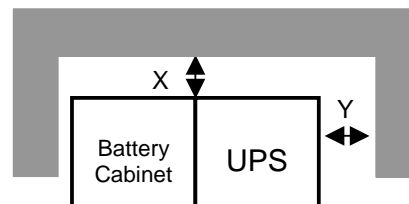


Figure 3.2: UPS + Battery cabinet space recommendation

**NOTE:** **Cabinet A and B** are provided with rollers and if on the installation side 1m longer cables are foreseen the UPS can be moved to the front and serviced.

**Cabinet C** needs left and right access of 400mm

### 3.6 CABLING

POWERVALUE cabling must be achieved in accordance with one of the three following configurations:

POWERVALUE 7.5, 10 and 12kVA with SINGLE PHASE INPUT (Cabinet A)

POWERVALUE 7.5, 10 and 15kVA with THREE PHASE INPUT (Cabinet A)

POWERVALUE 7.5, 10, 15 and 20kVA with THREE PHASE INPUT (Cabinet B)

**NOTE:** Before you start cabling your UPS **PowerValue™** make sure you have determined the correct Version with the correct POWER, CABINET and INPUT CONFIGURATION.

#### 3.6.1 Cabling of POWERVALUE 7.5, 10 and 12kVA with SINGLE PHASE INPUT

**NOTE: THIS UPS COMES (STANDARD VERSION) WITH A SINGLE CABLE FEED (FOR RECTIFIER AND BYPASS). IF DUAL FEED IS REQUESTED PLEASE CONTACT YOUR SERVICE OFFICE BEFORE PERFORMING ANY CABLING OF UPS.**

#### 3.6.2 Connection Diagram

To ensure correct operation of the UPS and its ancillary equipment it is necessary to provide the mains cables with appropriate fuse protection.

To connect the **PowerValue™** to the mains power supply see Figures 3.3, 3.4 and 3.5.



**ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL. DO NOT OPERATE IN CASE OF PRESENCE OF WATER OR MOISTURE. BY OPENING OR REMOVING THE UPS-COVERS YOU RUN RISK OF EXPOSURE TO DANGEROUS VOLTAGES!**

#### 3.6.3 Preparation for the Input Cabling

Before you start connecting the UPS, ensure that:

- MAINS VOLTAGE (INPUT VOLTS) AND FREQUENCY (FREQUENCY) CORRESPOND TO THE VALUES INDICATED ON THE NAMEPLATE OF THE UPS.
- EARTHING IS PERFORMED IN ACCORDANCE WITH THE PRESCRIBED IEC STANDARDS OR WITH LOCAL REGULATIONS;
- UPS IS CONNECTED TO THE MAINS THROUGH A LV-DISTRIBUTION BOARD WITH A SEPARATE MAINS LINE (PROTECTED WITH A CIRCUIT BREAKER OR FUSE) FOR THE UPS.

Provide input breaker and cables according to the indications in TECHNICAL SPECIFICATIONS at the end of this USER MANUAL or in accordance with the prescribed IEC Standards or in accordance with the local regulations.

The input of the UPS must be fitted with circuit breakers or other kind of protection. The circuit breakers will be connected between the mains supply and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

#### 3.6.4 Earthing



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED TRAINED INTERNAL PERSONNEL.**

To ensure protection of personnel during the installation of UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- Loads are shut down and disconnected;
- UPS **PowerValue™** is shut down and voltage-free.
- Maintenance Bypass(MANUAL BYPASS) is open in position OFF

Connecting sequence of earthing wire (see Figure 1):

- 1) Unscrew both screws of the terminal cover plate (4) and remove the terminal cover plate.
- 2) Carefully remove terminal cover plate (4) and don't pull on the earthing wire (5). If necessary the earthing wire may be removed during the cabling. When the cabling has been performed the earthing wire must be connected again.
- 3) **Connect the earthing wire coming from the LV-Distribution Board to the terminal "PE".**

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

### 3.6.5 Connection of the Mains Supply

After the UPS has been unpacked and brought to its final position the authorized technician may start with the cabling.



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure protection of the personnel during the installation of the UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- All loads are shut down and disconnected;
- UPS PowerValue™ is shut down and voltage-free.
- Remove the terminal cover of the UPS

Before connecting the input power cables make sure that:

- UPS-System is placed in its correct position;
- Maintenance Bypass IA1 is open in position OFF;

Connect the input power cable coming from the LV-Distribution Board to the terminals of the UPS in accordance with see Figure 1.



**NOTE: Neutral input wire must always be connected!**

NOTE: The UPS PowerValue™ is provided with facilities for both single feed (one common input cable for rectifier and bypass) and dual feed (two separate input cables for rectifier and bypass respectively).

The standard UPS PowerValue™ is always supplied with facilities for a single feed. If dual feed is required please contact next Service Centre.

### 3.6.6 Single Input Feed

To achieve correct Input Cabling see Drawing in see Figure 1.

For single input feed connect the mains input cable to UPS Terminal Block according to the following table:

MAINS INPUT CABLE	UPS TERMINAL
Phase L1	1L1
NEUTRAL	1N
EARTH	PE

For minimum recommended Input Cable Sections and Fuse Ratings for the PowerValue™ see table in Section Technical Specifications at the end of this User Manual.

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

### 3.6.7 Dual Input Feed

**NOTE:** In the standard version POWERVALUE comes with SINGLE INPUT FEED. If DUAL INPUT FEED is required please contact your next service office before performing any cabling.

### 3.6.8 Preparation for the Output Cabling

Before you start connecting the loads, ensure that the sum of the indicated UPS-Systems rated powers (OUTPUT POWER) on the nameplates (on the front side of the UPS-Systems) is equal to or larger than the total load requirements.

The output of the UPS must be fitted with circuit breakers or other kind of protection. These circuit breakers will be connected between the loads and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

These circuit breakers will enable the protection of each load separately.

The size of the circuit breakers depends on the load rating of the load sockets. The circuit breakers must comply with the prescribed IEC Standards. It is recommended to provide a separate output distribution board for the load.

The following values should be indicated on the output distribution board:

- Maximum total load rating;
- Maximum load rating of the load sockets.

If a common distribution board is used (sockets for Mains and UPS voltage), ensure that on each socket there is an indication of the applied voltage ("Mains" or "UPS").

Output power cable ratings should be in accordance with the recommended cable sections and fuses ratings or in accordance with the prescribed IEC Standards or with the local regulations.

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

Ensure that the earthing is performed in accordance with the prescribed IEC Standards or with the local regulations.

### 3.6.9 Connection of the Load



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure protection of the personnel during the installation of the UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- All loads are shut down and disconnected;
- UPS PowerValue™ is shut down and voltage-free.

Before connecting the output power cables make sure that:

- UPS-Systems is fitted in its correct position;
- Maintenance Bypass(MANUAL BYPASS)is open in position OFF

Remove the terminal cover of the UPS.

Connect the output power cable coming from the LV-Distribution Board to the terminals of the UPS Figure 1.

### 3.6.10 Output Cabling

To achieve correct Output Cabling see Figure 1.

OUTPUT CABLE	UPS TERMINAL
Phase L1	3L1
NEUTRAL	3N
EARTH	PE


Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

### 3.6.11 How to fix the POWERVALUE to the floor

After having performed the connections screw the terminal cover plate back on the UPS.

Make sure that the earthing wire is correctly connected on the terminal cover plate.

Once the UPS has been brought to its final position it should be blocked by means of the blocking feet. Release the blocking feet on the terminal cover plate until the UPS is blocked

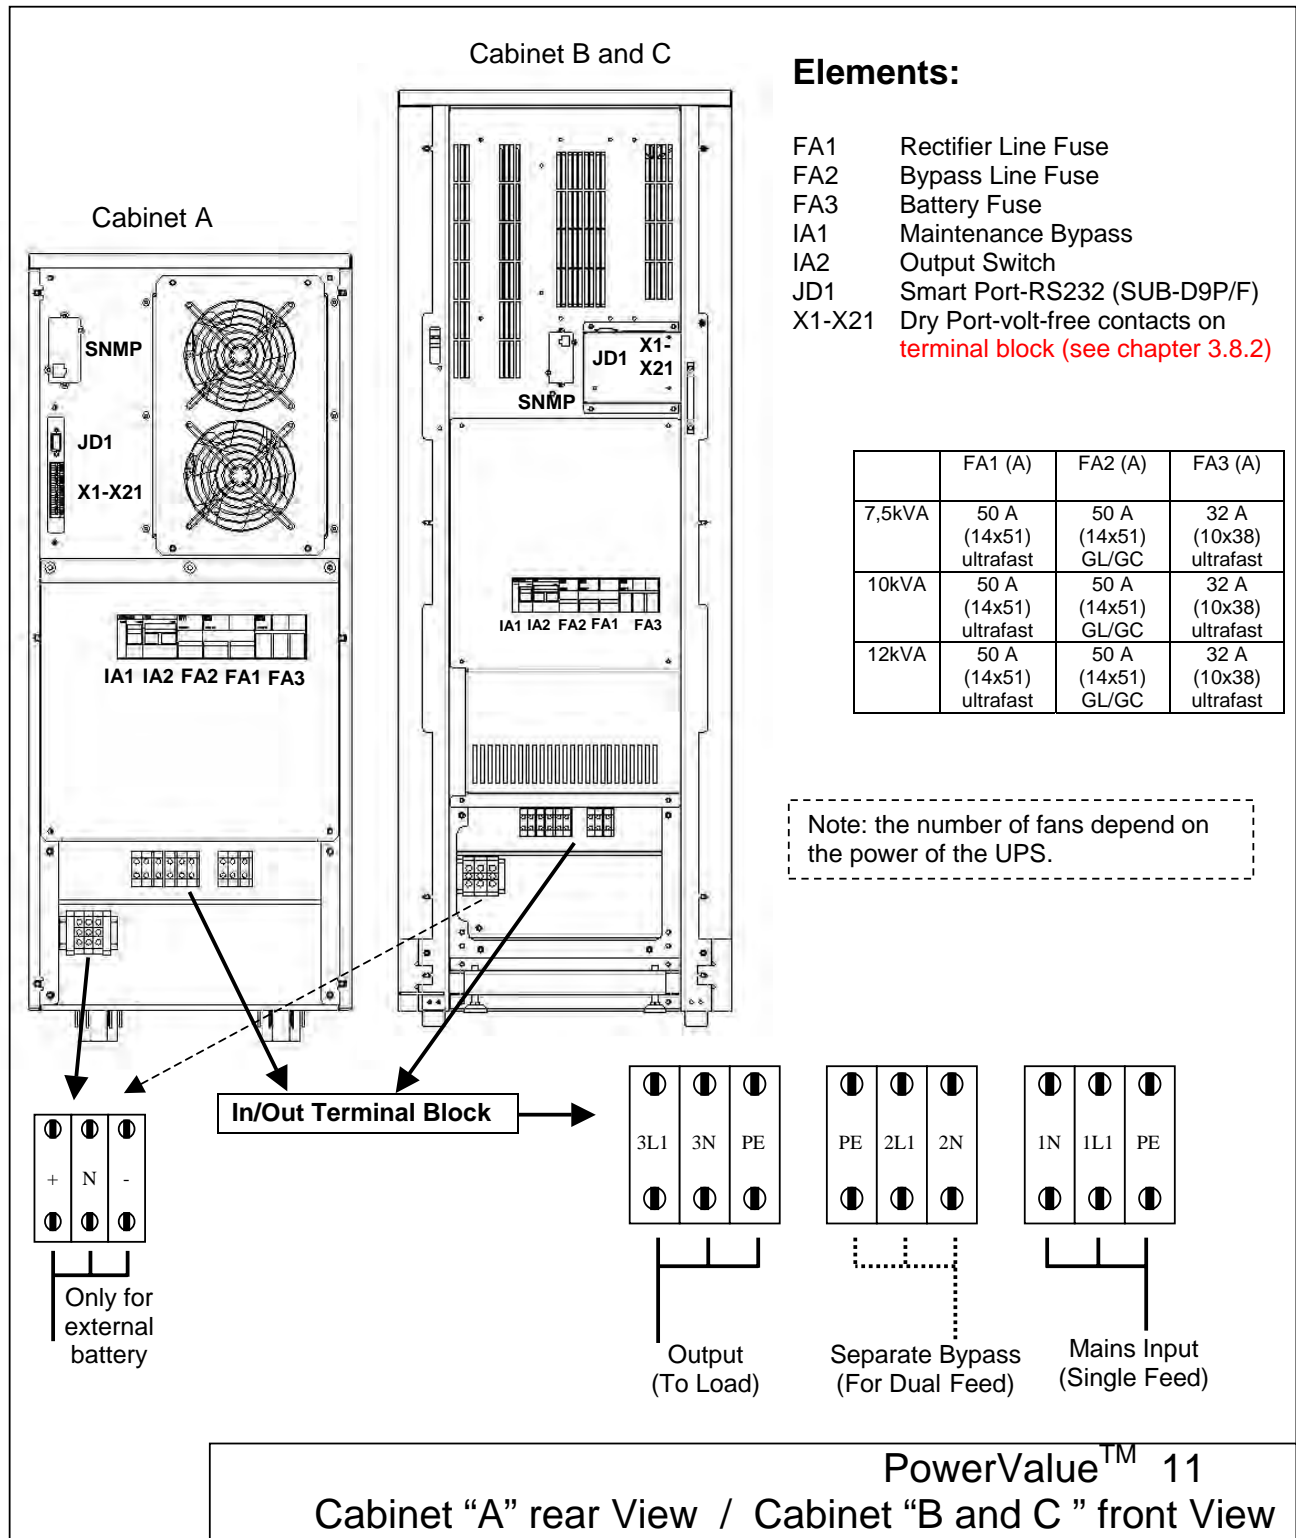

**Figure 1** Connection of UPS POWERVALUE 7.5, 10 and 12kVA with single phase input mains supply. Output Load connection terminals and connection of possible optional battery cabinet (SINGLE INPUT FEED).

### 3.6.12 Cabling of POWERVALUE 7.5, 10, 12, 15 and 20kVA with THREE PHASE INPUT

**NOTE:** Before you start cabling your UPS POWERVALUE make sure you have determined the correct Version with the right POWER and INPUT CONFIGURATION.

**NOTE:** THIS UPS COMES (STANDARD VERSION) WITH A SINGLE CABLE FEED (FOR RECTIFIER AND BYPASS). IF DUAL FEED IS REQUESTED PLEASE CONTACT YOUR SERVICE OFFICE BEFORE PERFORMING ANY CABLING OF UPS.

### 3.6.13 Connection Diagram

To ensure correct operation of the UPS and its ancillary equipment it is necessary to provide the mains cables with appropriate fuse protection.

To connect the PowerValue™ to the mains power supply see Figures 2 and 3.



---

**ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL. DO NOT OPERATE IN CASE OF PRESENCE OF WATER OR MOISTURE. BY OPENING OR REMOVING THE UPS-COVERS YOU RUN RISK OF EXPOSURE TO DANGEROUS VOLTAGES!**

### 3.6.14 Preparation for the Three Phase Input Cabling

Before you start connecting the UPS, ensure that:

- MAINS VOLTAGE (INPUT VOLTS) AND FREQUENCY (FREQUENCY) CORRESPOND TO THE VALUES INDICATED ON THE NAMEPLATE OF THE UPS.
- EARTHING IS PERFORMED IN ACCORDANCE WITH THE PRESCRIBED IEC STANDARDS OR WITH LOCAL REGULATIONS;
- UPS IS CONNECTED TO THE MAINS THROUGH A LV-DISTRIBUTION BOARD WITH A SEPARATE MAINS LINE (PROTECTED WITH A CIRCUIT BREAKER OR FUSE) FOR THE UPS.

Provide input breaker and cables according to the indications in TECHNICAL SPECIFICATIONS at the end of this USER MANUAL or in accordance with the prescribed IEC Standards or in accordance with the local regulations.

The input of the UPS must be fitted with circuit breakers or other kind of protection. The circuit breakers will be connected between the mains supply and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

### 3.6.15 Earthing



---

**ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure protection of personnel during the installation of UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- Loads are shut down and disconnected;
- UPS PowerValue™ is shut down and voltage-free.

Maintenance Bypass (MANUAL BYPASS) is open in position OFF

- 1) Unscrew both screws of the terminal cover plate (4) and remove the terminal cover plate.
- 2) Carefully remove terminal cover plate (4) and don't pull on the earthing wire (5). If necessary the earthing wire may be removed during the cabling. When the cabling has been performed the earthing wire must be connected again.
- 3) Connect the earthing wire coming from the LV-Distribution Board to the terminal "PE".

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly

### 3.6.16 Connection of the Mains Supply

After the UPS has been unpacked and brought to its final position the authorized technician may start with the cabling.



**ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure protection of the personnel during the installation of the UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- All loads are shut down and disconnected;
- UPS PowerValue™ is shut down and voltage-free.

Remove the terminal cover of the UPS

Before connecting the input power cables make sure that:

- UPS-System is placed in its correct position;
- Maintenance Bypass IA1 is open in position OFF;

Connect the input power cable coming from the LV-Distribution Board to the terminals of the UPS in accordance with Figures 2 and 3.



**NOTE: Neutral input wire must always be connected!**

NOTE: The UPS PowerValue™ is provided with facilities for both single feed (one common input cable for rectifier and bypass) and dual feed (two separate input cables for rectifier and bypass respectively).

The standard UPS PowerValue™ is always supplied with facilities for a single feed. If dual feed is required please contact next Service Centre.

### 3.6.17 Single Input Feed

To achieve correct Input Cabling see Drawing in see Figures 3.

For single input feed connect the mains input cable to UPS Terminal Block according to the following table:

MAINS INPUT CABLE	UPS TERMINAL
Phase L1	1L1
Phase L2	1L2
Phase L3	1L3
NEUTRAL	1N
EARTH	PE

For minimum recommended Input Cable Sections and Fuse Ratings for the PowerValue™ see table in Section Technical Specifications at the end of this User Manual.

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

### 3.6.18 Dual Input Feed

NOTE: In the standard version PowerValue™ comes with SINGLE INPUT FEED. If DUAL INPUT FEED is required please contact your next service office before performing any cabling.



### 3.6.19 Preparation for the Output Cabling3

Before you start connecting the loads, ensure that the sum of the indicated UPS-Systems rated powers (OUTPUT POWER) on the nameplates (on the front side of the UPS-Systems) is equal to or larger than the total load requirements.

The output of the UPS must be fitted with circuit breakers or other kind of protection. These circuit breakers will be connected between the loads and the UPS and will provide additional protection to the UPS in the event of overloads and short circuits.

These circuit breakers will enable the protection of each load separately.

The size of the circuit breakers depends on the load rating of the load sockets.

The circuit breakers must comply with the prescribed IEC Standards. It is recommended to provide a separate output distribution board for the load.

- The following values should be indicated on the output distribution board:
- Maximum total load rating;
- Maximum load rating of the load sockets.
- If a common distribution board is used (sockets for Mains and UPS voltage), ensure that on each socket there is an indication of the applied voltage (“Mains” or “UPS”).

Output power cable ratings should be in accordance with the recommended cable sections and fuses ratings or in accordance with the prescribed IEC Standards or with the local regulations.

Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly.

Ensure that the earthing is performed in accordance with the prescribed IEC Standards or with the local regulations.

### 3.6.20 Connection of the Load



**ALL THE OPERATIONS IN THIS MANUAL MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure protection of the personnel during the installation of the UPS make sure that the connections are performed under the following conditions:

- No mains voltage is present;
- All loads are shut down and disconnected;
- UPS PowerValue™ is shut down and voltage-free.

Before connecting the output power cables make sure that:

- UPS-Systems is fitted in its correct position;
- Maintenance bypass is in position OFF;

Remove the terminal cover of the UPS.

Connect the output power cable coming from the LV-Distribution Board to the terminals of the UPS as shown in drawing in Figure 3.

### 3.6.21 Output Cabling

To achieve correct Output Cabling see Terminal Block in Figure 3.

For output cabling connect output cable to UPS Terminal according to following Output to UPS terminal block correlation.

OUTPUT CABLE	UPS TERMINAL
Phase L1	3L1
NEUTRAL	3N
EARTH	PE


Under the connection terminal of the UPS there is a cable-fixing rail to ensure that the cables have been fastened properly

### 3.6.22 How to fix the POWERVALUE to the floor

After having performed the connections screw the terminal cover plate back on the UPS.

Make sure that the earthing wire is correctly connected on the terminal cover plate.

Once the UPS has been brought to its final position it should be blocked by means of the 2 castors which are situated near the two front rollers of the UPS.

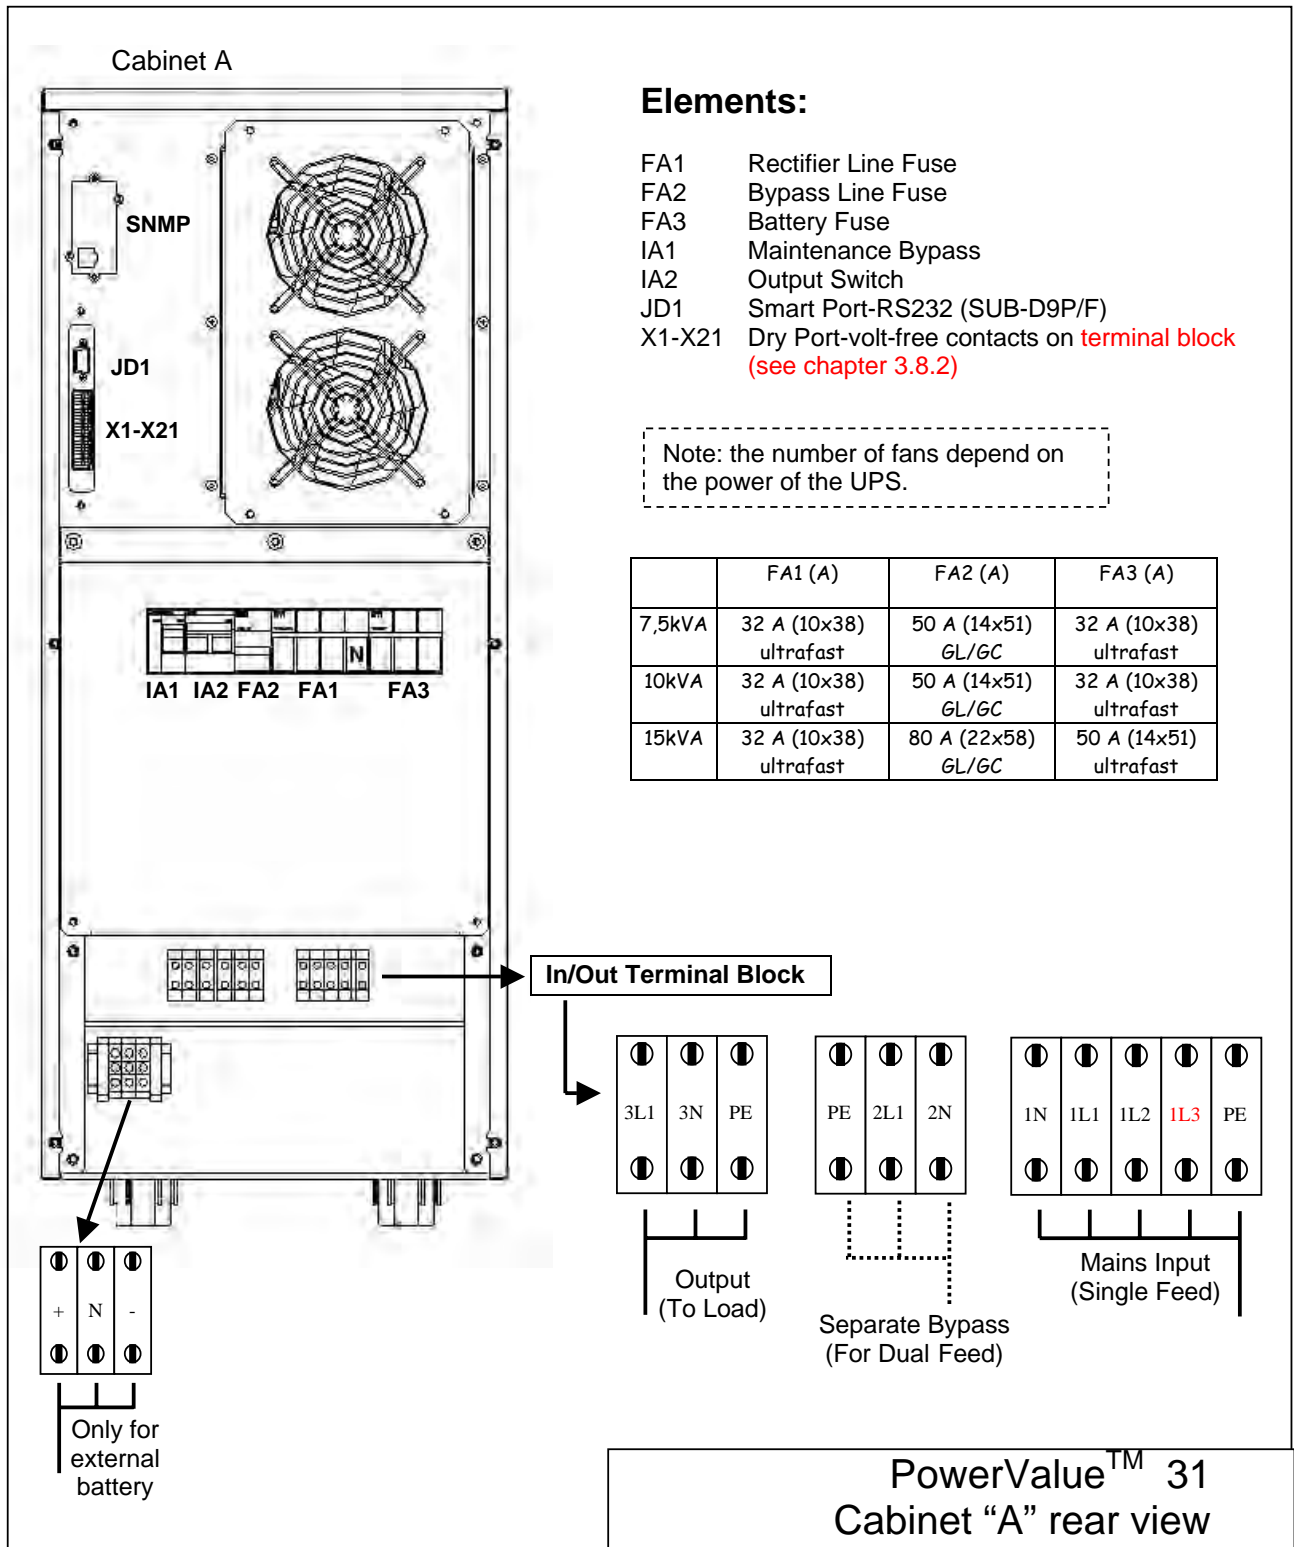

**Figure 2** Connection of UPS POWERVALUE 7.5,10 and 15 kVA with three phase input mains supply. Output Load connection terminals (SINGLE INPUT FEED).

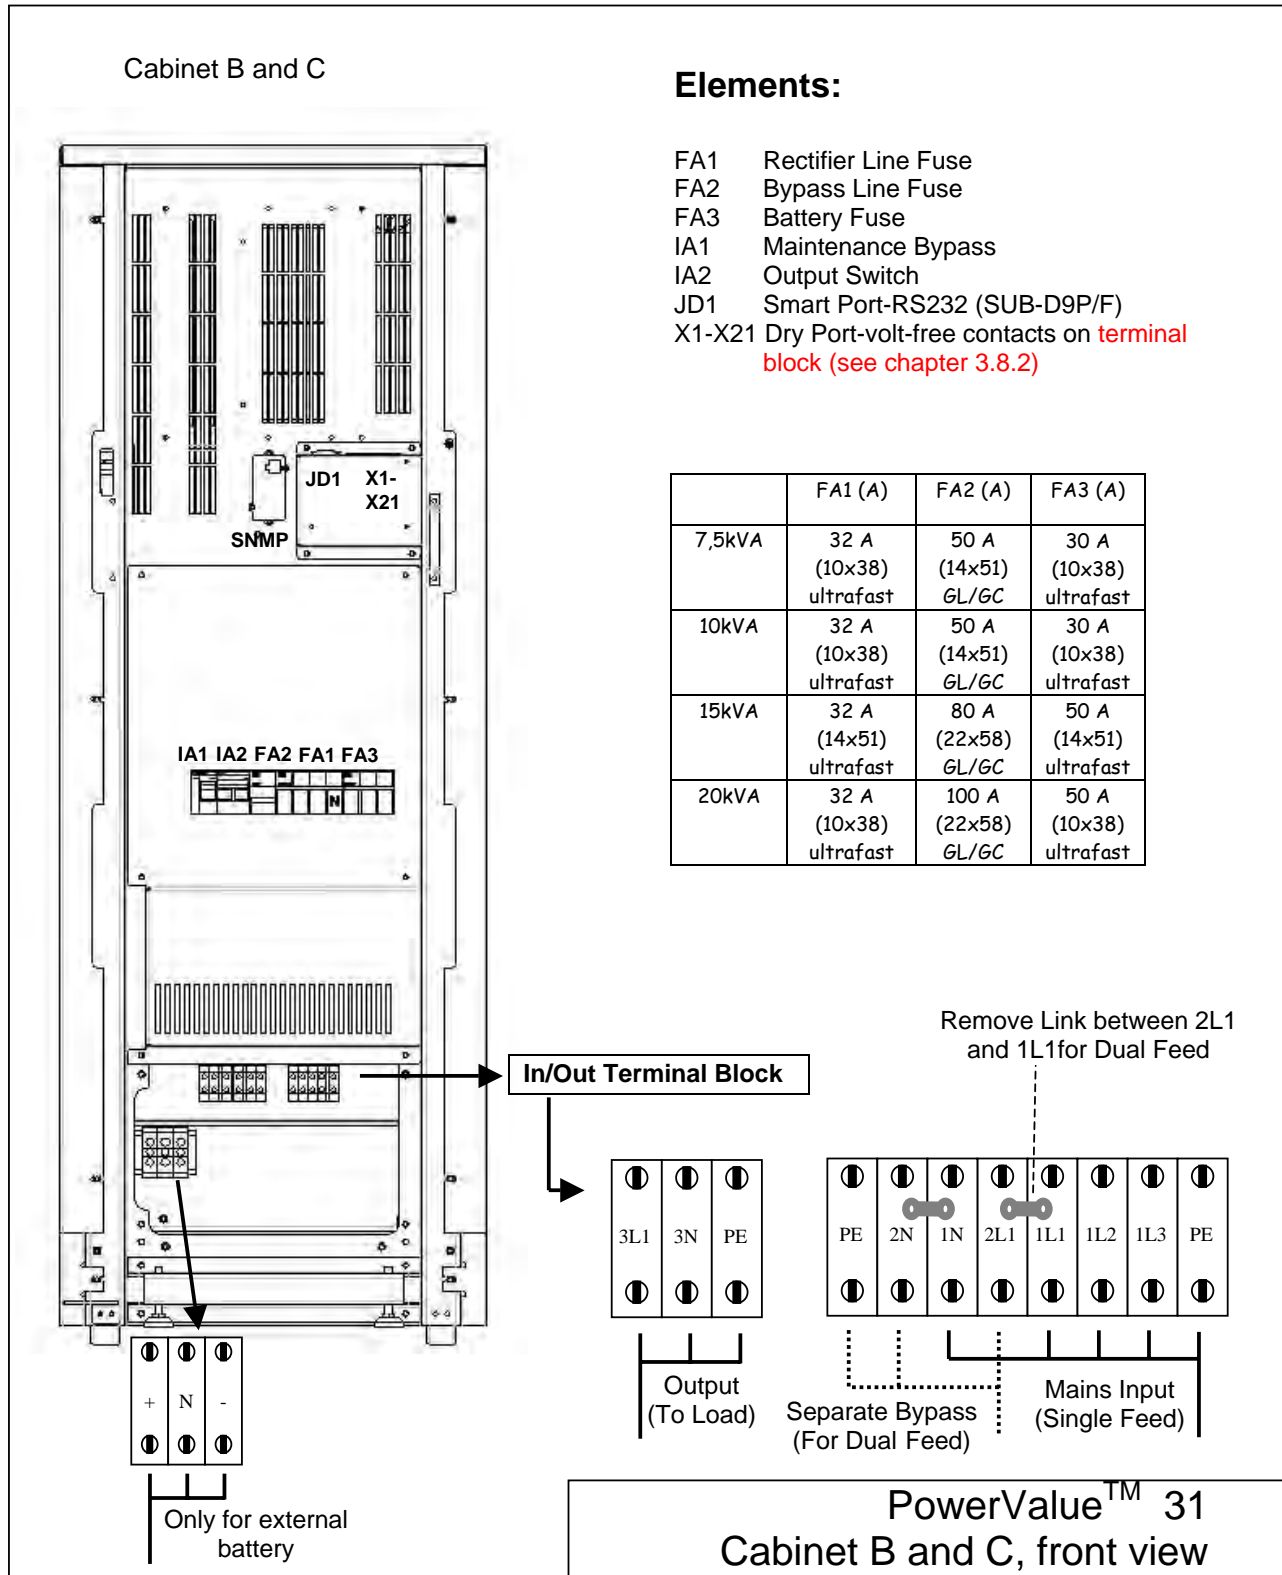


Figure 3 Connection of UPS POWERVALUE 7.5, 10, 15 and 20kVA with three phase input mains supply. Output Load connection terminals (SINGLE INPUT FEED).


### 3.7 CONNECTION OF EXTERNAL BATTERIES FOR UPS POWERVALUE

For the standard POWERVALUE products no external battery cabinets are provided. Longer autonomies are achieved by using one of the higher UPS Cabinets B or C which have more space for batteries than the Cabinet A.

The PowerValue™ UPS is delivered with an optional external batteries connection terminals only if it has been ordered **without batteries**.

**THE CONNECTION OF THE EXTERNAL BATTERIES MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

**To connect external batteries :**

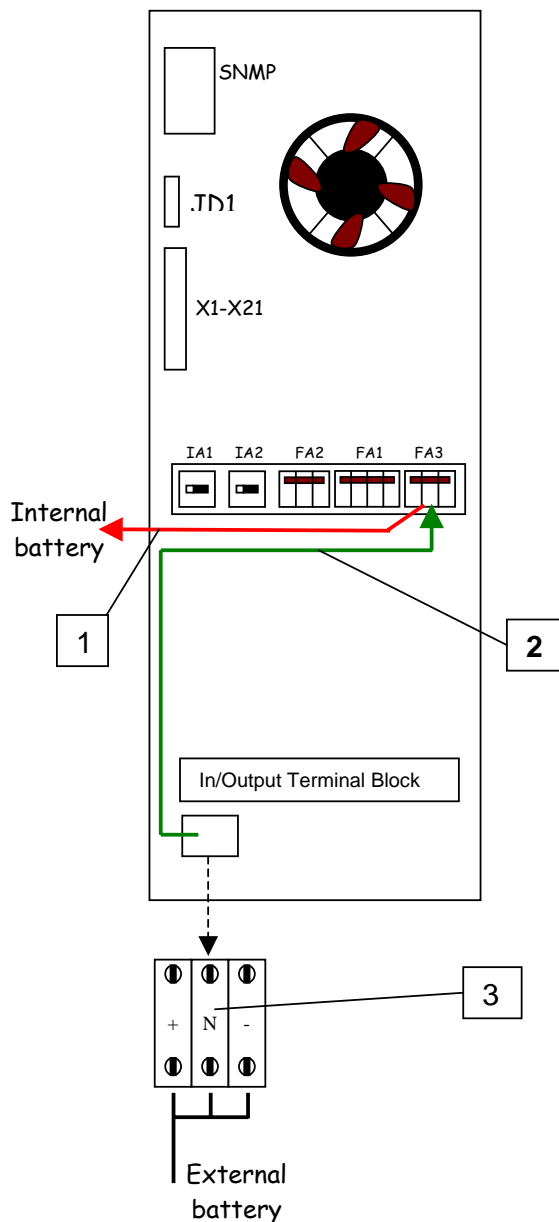

1. Disconnect the wires for internal battery at the bottom of FA3 (red).
2. Connect the wires from external battery terminals at the bottom of FA3 (green).
3. Connect the wires from the external battery cabinet to the UPS.



### 3.8.2 DRY PORT (volt-free contacts)

Description:

The DRY PORT may be used for:

- Connection of remote shutdown facilities (see paragraph 7.2);
- Connection of Remote Status Panel (see paragraph 7.3);
- Provision of signals for the automatic and orderly shutdown of servers or IBM AS400, etc.

Definition of terminals on DRY PORT :

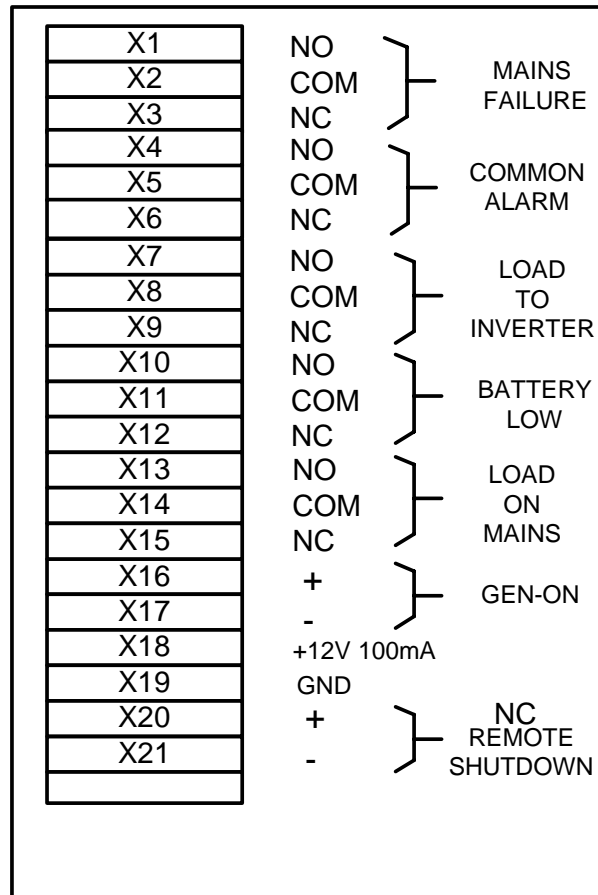


Figure 3.10 DRY PORT Connections

All volt free contacts are rated 60 VAC max. and 500 mA max.

# 4 Operation

## 4.1 COMMISSIONING

The **PowerValue™** UPS is a high quality electronic machine that must be commissioned by a fully trained and authorized NEWAVE field service engineer before being put into use.

The commissioning of the UPS involves the connection of the UPS and battery, the checking of the electrical installation and operating environment of the UPS, the controlled start-up and testing of the UPS and customer training.

*Any **PowerValue™** UPS system not commissioned by a NEWAVE field service engineer or authorized service centre must be considered an electrical hazard and NEWAVE accepts no responsibility for its safe operation or the safety of any personnel. Additionally, the manufacturer's warranty is immediately invalidated if the UPS is put into use before it has been correctly commissioned*

## 4.2 CONTROL PANEL.

The user-friendly control panel is composed of three parts:

- POWER MANAGEMENT LCD DISPLAY (PMD);
- LED INDICATORS;
- KEYS.



Figure 4.1 Control Panel PowerValue™ .

### 4.2.1 Power Management Display (PMD)

The 2 x 20 character LCD simplifies the communication with the UPS and provides the necessary monitoring information about the UPS.

The menu driven LCD enables the access to the:

- EVENT REGISTER;
- Monitor the input and output U, I, f, P,
- Battery runtime;
- To perform commands like start-up and shut-down of UPS and
- Load transfer from INVERTER to BYPASS and vice-versa;
- DIAGNOSIS (SERVICE MODE);
- Adjustments and testing.



### 4.2.2 LED Indicators

The mimic diagram serves to indicate the general status of the UPS. The LED-indicators show the power flow status and in the event of mains failure or load transfer from inverter to bypass and vice-versa. The corresponding LED-indicators will change colours from green (normal) to red (warning).

The LED's LINE 1 (rectifier) and LINE 2 (bypass) indicate the availability of the mains power supply.

The LED's INVERTER and BYPASS if green indicate which of the two is supplying power to the critical load. When the battery is supplying the load due to mains failure the LED-indicator BATTERY is flashing.

The LED-indicator ALARM is a visual indication of any internal or external alarm condition. At the same time an audible alarm will be activated.

INDICATOR	INDICATOR STATUS	MEANING
ALARM	OFF	No alarm condition
	RED	Alarm condition
LINE 1	GREEN	Mains rectifier available
	RED	Mains rectifier not available
LINE 2	GREEN	Mains bypass available
	RED	Mains bypass not OK or not available
	OFF	UPS is turned off
BY-PASS	GREEN	Load on bypass (Bypass-or Eco-Mode)
	OFF	Bypass not operating (switched-off)
INV	GREEN	Load on inverter
	RED	Inverter fault or load not transferable to inverter
	OFF	Inverter not operating (switched-off)
BATTERY	GREEN	Battery OK
	RED	Battery fault or battery is discharged
	Flashing GREEN	Battery in discharge or battery fuse open

### 4.2.3 Keys

The keys allow the user to operate the UPS to perform settings and adjustments, to start-up and shutdown the UPS, to monitor on the LCD display the voltages, currents, frequencies and other values.

KEYS	FUNCTION
ON/OFF ON/OFF	Serve to switch-on (press both keys simultaneously), or shutdown the UPS (press both keys simultaneously)
UP (↑)	Move upwards through the menu
DOWN (↓)	Move downwards through the menu.
RESET	Cancel the audible alarm. If the alarm condition was only transient the LED-indicator ALARM would also extinguish otherwise it will remain on (red).
ENTER	Confirms a chosen menu item.

#### 4.2.4 ON/OFF Start-up and Shutdown Buttons

By pressing simultaneously both ON/OFF Buttons on the Control Panel the UPS may be switched on or shutdown. This is to prevent accidental start-up or shutdown of the UPS. The two main ON/OFF buttons are also used as a security LOAD–OFF-switch, making it possible to quickly disconnect the load from the UPS in emergency situations when a competent technician working on the UPS is in danger or if the UPS has some kind of anomaly.



---

**TO SHUT DOWN A UPS-SYSTEM YOU MUST PRESS BOTH ON/OFF-BUTTONS SIMULTANEOUSLY ON CONTROL PANEL!**



---

**ACTIVATION OF THE ON/OFF BUTTONS WHEN THE UPS IS NOT IN MAINTENANCE BYPASS MODE WILL INTERRUPT THE POWER SUPPLY TO THE LOAD.**

#### LOAD OFF on POWERVALUE

If, for security or emergency reasons, it is necessary to immediately disconnect the load from the UPS, press the two red ON/OFF Buttons simultaneously. This is to avoid any accidental manipulation.

### 4.3 DESCRIPTION OF THE LCD

#### 4.3.1 Status Screens

DESCRIPTION	LCD-DISPLAY
1 Load is protected by UPS power (load is supplied by inverter(Normal Operation)	<b>LOAD PROTECTED</b>
2 Load is not protected by UPS power it is supplied by mains power (load on bypass)	<b>LOAD NOT PROTECTED</b>
3 Load supply completely interrupted. UPS has been switched off by "ON/OFF" buttons	<b>LOAD OFF SUPPLY FAILURE</b>

#### 4.3.2 Main Menu Screen

DESCRIPTION	LCD-DISPLAY
1 Logging Control. A log of the last 64 events is stored in the Power Management Display.	→ <b>EVENT LOG</b> MEASUREMENTS
2 In Menu Measurements: monitor voltages, power,frequencies, currents, autonomy etc.	→ <b>MEASUREMENTS</b> COMMANDS
3 The Command Menu enables to perform the commands "Load to inveter", Load to bypass, battery test.	→ <b>COMMANDS</b> UPS DATA
4 The UPS Data are the UPS personalized information "serial number"	→ <b>SET-UP DATA</b> SET-UP USER
5 Various settings can be performed by the user: Date/Time, automatic battery test, etc.	→ <b>SET-UP USER</b> SET-UP SERVICE
6 Various adjustments can be performed by the service staff	→ <b>SET-UP SERVICE</b> NO MORE MENU

#### 4.3.3 Event Log Screen

DESCRIPTION	LCD-DISPLAY
1 Logging Control; a log of the last 64 events is stored in the Power Management Display.	<b>01</b> 05-10-00 14-38-59 <b>LOAD TO INV.</b>
2 Every stored event is identified with a sequential number and time stamp.	<b>02</b> 05-10-00 14-38-56 <b>LOAD TO BYP.</b>
3 All events and alarms are indicated with their date and time of appearance.	<b>03</b> 05-10-00 14-37-14 <b>LOAD OFF</b>

#### 4.3.4 Measurements Screen

DESCRIPTION	LCD-DISPLAY
1 Battery Runtime	<b>BATT. RUN TIME (MIN)</b> 00h 00m
2 UPS-Output Frequency	<b>OUTPUT FREQUENCY (HZ)</b> 50.00
3 Bypass Frequency.	<b>BYPASS FREQUENCY (HZ)</b> 50.00
4 Battery Voltage	<b>BATTERY VOLTAGE (V)</b> + 0.0 - 0.0
5 Battery Charger Current	<b>BATT. CHARGE CUR. (A)</b> + 0.0 - 0.0
6 Discharge Current.	<b>DISCHARGE CURRENT (A)</b> 00.00
7 Rectifier Voltage of all three phases or single phase	<b>RECTIFIER VOLTAGE (V)</b> 230 230 230

- 8 Bypass Voltage
- 9 Output Voltage
- 10 Output Current
- 11 Active Output Power
- 12 Reactive Output Power
- 13 Apparent Output Power
- 14 Output Power
- 15 Battery capacity

<b>BYPASS VOLTAGE (V)</b>		
230	0	0
<b>OUTPUT VOLTAGE (V)</b>		
230	0	0
<b>OUTPUT CURRENT (A)</b>		
00.00	00.00	00.00
<b>ACTIVE POWER (KW)</b>		
00.00	00.00	00.00
<b>REACTIVE POWER (kVar)</b>		
00.00	00.00	00.00
<b>APPARENT POWER (KVA)</b>		
00.00	00.00	00.00
<b>OUTPUT POWER (%)</b>		
00.00	00.00	00.00
<b>BATT. CAPACITY (%)</b>		
00.00		

#### 4.3.5 Commands Screen

##### DESCRIPTION

- 1 Transfer Load to inverter
- 2 Transfer Load to bypass.
- 3 Battery Test

##### LCD-DISPLAY

→ LOAD TO INVERTER LOAD TO BYPASS
→ LOAD TO BYPASS PERFORM BATT.TEST
→ PERFORM BATT.TEST NO MORE COMMANDS

#### 4.3.6 UPS Data

##### DESCRIPTION

- 1 These general UPS Data are installed at the manufacturing plant
- 2 Manufacturing date
- 3 EPROM Version
- 4 Dynamic Password
- 5 Actual Date and Time

##### LCD-DISPLAY

<b>UPS SERIAL NUMBER</b> NW-nnnnnn	
<b>DATE OF MANUFACTURE</b> 15-01-2003	
<b>EPROM VERSION</b> V-000	
YES NO	
<b>DATE</b> dd-mm-yyyy	<b>TIME</b> hh:mm:ss

#### 4.3.7 Set-Up User

##### DESCRIPTION

- 1 Set-up Language
  
- 2 Set-up Date and Time

##### LCD-DISPLAY

→ SET LANGUAGE SET DATE AND TIME
ENGLISH FRENCH SPANISH GERMAN POLISH
→ SET-UP DATE AND TIME SET-UP BATT. TEST
DD-MM-YY HH-MM-SS

3 Set-up battery test

→ SET BATTERY TEST SET GENERATOR OP.
---

DAY OF MONTH (1-31)
------------------------

HOUR OF DAY (1-24)
-----------------------

REPETITIVE (Y/N) YES/NO
----------------------------

4 Set-up operation with Gen-Set

→ SET GENERATOR OP. NO MORE SETTINGS
---

BATT.CHARGE LOCK YES/NO
----------------------------

BYPASS LOCK YES/NO
-----------------------

### 4.3.8 Set-Up Service

#### DESCRIPTION

- 1 This Menu is reserved for authorized service engineers. It is not to be used by End-Users
- 2 Type in password

#### LCD-DISPLAY

→ SET-UP SERVICE PASSWORD
------------------------------

→ PASSWORD.
-------------

Password is necessary to enter.


**NOTE:** Apart from the adjustment of voltages, frequencies, currents, power and autonomies in the SET-UP Service it is also possible to set and check the following parameters:

- UPS Rated Power
- Single (standard) or Dual Input feed
- f-converter, 50/60Hz and 60/50Hz
- Sync window (2-4%)

## 4.4 OPERATING MODES

### 4.4.1 Mode "ON LINE" (INVERTER MODE)

The ON-LINE-Mode is the UPS-Operating Mode in which the load is supplied through the RECTIFIER and INVERTER.

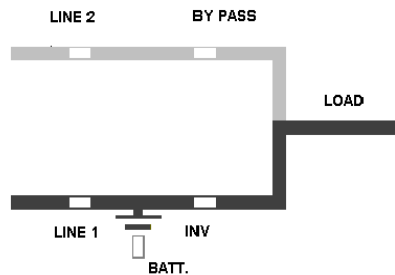

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	OFF
INVERTER	Green
BATTERY	Green

Using the control panel (see figure 4.1), the UPS can easily be transferred to the ON-LINE-Mode. The ON-LINE-Mode provides the highest degree of protection, especially in the event of a mains disturbance or failure.


This operating mode is always recommended if the critical loads (computer systems) will not tolerate any interruption of the supply (not even the shortest).

In the unlikely event of an inverter fault or overload condition the UPS will transfer the load automatically and without interruption to the static bypass-mains supply (transfer time = 0).

### 4.4.2 Mode "OFF-LINE" (ECO- or BYPASS MODE)

In the "OFF-Line Mode", the load is supplied from the mains through the static bypass.

Using the control panel (see figure 4.1), the UPS may be easily transferred to "Bypass Mode".

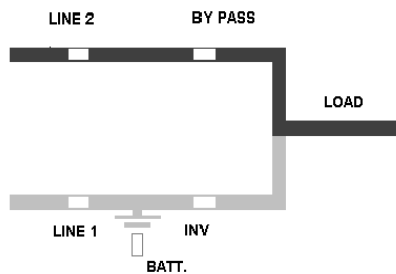

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	Green
INVERTER	OFF
BATTERY	Green

When the UPS is operating in "Bypass Mode", the efficiency of the system is higher. In the event of a mains failure the load will automatically be transferred from mains to inverter within 5 msec. The battery charger remains active in the "Bypass-Mode".

The "Bypass-Mode", is recommended only if the loads can tolerate interruptions of 3-5 ms (transfer time from Bypass Mode to ON-LINE Mode).




**In order to provide the load with maximum protection NEWAVE always recommends that the load be supplied by the inverter (ON-LINE-Mode).**

#### 4.4.3 "MAINTENANCE BYPASS" - Mode

The Maintenance Bypass Mode is performed by means of the MANUAL BYPASS SWITCH on the rear for cabinet A and front for cabinet B/C of the UPS:

POSITION OF SWITCH	EFFECT
ON	Bypass-Switch Closed (Load supplied directly from mains) LCD-indication: "MANUAL BYP IS CLOSED" LED Indicators will indicate as shown in table below.
OFF	Bypass-Switch Open – Normal operating condition (Load supplied by inverter) LCD-indication "MANUAL BYP IS OPEN" LED Indicators will indicate as shown in table below.

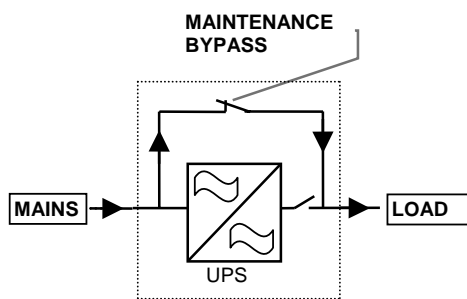

LED Indicator	ON	OFF
LINE 1	Green	Green
LINE 2	Green	Green
BYPASS	Green	Green
INVERTER	RED	OFF
BATTERY	Green	Green



**Before transferring the load to Maintenance Bypass switch always make sure all the UPS-modules are in the "Bypass-Mode" or "ECO-Mode".**



*IF THE UPS IS OPERATING IN THE MAINTENANCE BYPASS MODE THROUGH THE BYPASS SWITCH THE LOAD WILL NOT BE PROTECTED IN THE EVENT OF A MAINS FAILURE. IT IS THEREFORE STRONGLY RECOMMENDED TO SWITCH OVER TO THE ON-LINE MODE (INV. ON) OR BYPASS MODE (OFF-LINE MODE) AS SOON AS POSSIBLE.*

## 4.5 START-UP PROCEDURE



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

### Situation of UPS-System before switching it on:

1. The fuses for the supply of UPS-System in the Input Distribution Board on site are open.
2. Make sure all the input and output cabling has been performed correctly and check the input phase rotation.
3. Verify that output switch IA2 is open
4. Verify that the Maintenance Bypass Switch IA1 is open and in Position OFF.
5. Make sure the battery fuse FA3 is open.
6. Rectifier fuse FA1 and Bypass fuses FA2 on the UPS-System are inserted.

### Start up procedure of POWERVALUE:

1. Insert fuses for the supply of UPS-System in the Input Distribution
  - The LED-indicators LINE 1 and battery on UPS-Systems is lit – green
  - On LCD-Display “LOAD OFF, SUPPLY FAILURE” will appear.
2. UPS-System :  
Press both “ON/OFF” Main Buttons to switch on UPS. On LCD: “LOAD NOT PROTECTED” will appear and the LED-indicator will indicate as shown below:

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	Green
INVERTER	OFF
BATTERY	Flashing Green

3. Check Command: LOAD TO INVERTER  
On LCD: “LOAD PROTECTED” will appear and the LED-indicator will indicate as shown below:

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	OFF
INVERTER	Green
BATTERY	Flashing Green

4. Scroll through the menu measurement and check their correctness.
5. Check battery polarity and voltage.
6. If the battery polarity and voltage is correct insert FA3.
7. NOTE: The fuses in the OUTPUT DISTRIBUTION BOARD remain still open.  
Close output switch IA2 “OUTPUT LOAD” in UPS  
There is now UPS Power on the output Terminal Block.
8. Load transfer to Maintenance Bypass  
Go to Menu COMMANDS and choose command “LOAD TO BYPASS” and transfer the load to mains on control panel of UPS-System. Message “LOAD NOT PROTECTED” will appear on LCD.  
Close Maintenance Bypass Switch IA1 (position ON)



On LCD: "MANUAL BYP IS CLOSED" will appear and the LED-indicator will indicate as shown below:

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	Green
INVERTER	RED
BATTERY	Green

**NOTE:** Your UPS is now **on manual bypass** and the load is **not** protected

9. Connect Load to the UPS Output  
 Insert fuses in output Distribution Board  
 Verify on control Panel that the load is on bypass"
10. Open Maintenance Bypass Switch IA1  
 On LCD: "MANUAL BYP IS OPEN" will appear followed by  
 "LOAD NOT PROTECTED"
11. Check on LCD the Output Powers, Voltages Currents and Frequencies.
12. Load transfer to Inverter  
 Go to Menu COMMANDS and choose command "LOAD TO INVERTER" and transfer the  
 load to inverter on control panel of UPS-System.  
 On LCD: "LOAD PROTECTED" will appear.
13. Check the output Voltages and Currents once again.

**THE LOAD IS NOW PROTECTED BY THE UPS POWERVALUE**

## 4.6 SHUTDOWN PROCEDURE



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

The PowerValue™ UPS may be shutdown completely if the load does not need input power for an extended period of time.

It may be switched to Maintenance Bypass Mode for service or maintenance purposes, or transferred to the OFF-LINE Mode if the load does not need the highest degree of protection.

The load may be disconnected by means of the two ON/OFF (LOAD-OFF) buttons for security reasons.

### **Complete Shutdown procedure of PowerValue™:**



**The UPS may be shut down completely if the loads do not need any power supply. Therefore the following steps are to be performed only after the load has been disconnected and does not need any power supply.**

**ACTIVATION OF BOTH ON/OFF BUTTONS SIMULTANEOUSLY WHEN DURING NORMAL OPERATION WILL SWITCH OFF THE UPS OUTPUT AND NO LONGER SUPPLY POWER TO THE LOAD.**

1. Verify that the loads are shutdown and that there is no need for power supply to the load.
2. If the loads are all disconnected, press simultaneously the two ON/OFF buttons on the UPS-control panel.  
On the LCD: "LOAD OFF, SUPPLY FAILURE" will appear and the LED-indicator will indicate as shown below:

LED Indicator	Colour
LINE 1	Green
LINE 2	OFF
BYPASS	OFF
INVERTER	OFF
BATTERY	Flashing Green

3. Open battery fuses/breakers FA3
4. Open Input Fuses FA1 and FA2 in UPS.
5. Open Output switch IA2 "Output Load"
6. Open the mains fuses/breaker in the building distribution panel.

**AFTER SWITCHING OFF A UPS UNIT MAKE SURE THE INTERNAL DC-CAPACITORS HAVE BEEN DISCHARGED AND WAIT AT LEAST 10 MINUTES**

**THE UPS POWERVALUE IS NOW VOLTAGE FREE.**

## 4.7 LOAD TRANSFER: FROM INVERTER OPERATION TO MAINTENANCE BYPASS

If it is necessary to perform service or maintenance on the UPS it is possible to transfer the UPS to MAINTENANCE BYPASS.



**BEFORE YOU SWITCH THE MAINTENANCE BYPASS TO POSITION «ON», MAKE SURE THAT THE LOAD HAS BEEN TRANSFERRED TO MAINS SUPPLY (OFF-LINE MODE)**



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

### Situation of UPS-System before starting the Transfer Procedure to Maintenance Bypass:

The load is protected by POWERVALUE UPS running in normal operation. The UPS system is operating on inverter.

1. Using LDC panel, select the COMMANDS menu and choose command "LOAD TO BYPASS". This will transfer the LOAD to mains on the complete system. On LCD panel "LOAD NOT PROTECTED" will appear.
2. Close Maintenance Bypass Switch IA1 (position ON). On LCD: "MANUAL BYP IS CLOSED" will appear and the mimic panel will show:

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	Green
INVERTER	RED
BATTERY	Green

3. Press simultaneously both ON/OFF buttons on UPS-control panel. On the LCD's message "LOAD OFF, SUPPLY FAILURE" will appear and the mimic panel will show:

LED Indicator	Colour
LINE 1	Green
LINE 2	OFF
BYPASS	OFF
INVERTER	OFF
BATTERY	Green

4. Open output switch IA2 "Output Load"
5. Open battery fuses/breakers FA3
6. Open input fuses FA1 and FA2 so that the UPS is voltage-free.

**THE LOAD IS NOW SUPPLIED BY MAINS AND IS NOT PROTECTED**

## 4.8 LOAD TRANSFER: FROM MAINTENANCE BYPASS TO INVERTER OPERATIONS

This procedure describes the sequence of operations to be done in order to restart the UPS and restore ON-LINE mode (Load on Inverter).



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

### Situation of UPS-System before starting the Transfer Procedure to ON-LINE mode:

The load is supplied directly by Input Mains power and the UPS is OFF.

1. Close Input fuses FA1 and FA2.
2. Close battery fuses/breakers FA3.
3. Close output switch IA2.
4. On the LCD's: "LOAD OFF, SUPPLY FAILURE" will appear and the mimic panel will show:

LED Indicator	Colour
LINE 1	Green
LINE 2	OFF
BYPASS	OFF
INVERTER	OFF
BATTERY	Flashing/Green

5. Press simultaneously both ON/OFF buttons on UPS-control panel. Unit will start-up and after about 60 seconds the mimic panel will show:

LED Indicator	Colour
LINE 1	Green
LINE 2	Green
BYPASS	Green
INVERTER	RED
BATTERY	Green

6. Make sure that the bypass LED is green, then open the Maintenance Bypass Switch IA1 (position OFF).
7. Using LDC panel, select the COMMANDS menu and choose command "LOAD TO INVERTER". This will transfer the LOAD to Inverter on the complete system. On LCD panel "LOAD PROTECTED" will appear.

**THE LOAD IS NOW SUPPLIED BY INVERTER POWER AND IS PROTECTED**

# 5 Maintenance

## 5.1 INTRODUCTION



**ALL THE OPERATIONS IN THIS SECTION MUST BE PERFORMED BY AUTHORISED ELECTRICIANS OR BY QUALIFIED INTERNAL PERSONNEL.**

To ensure an optimum operation of the **PowerValue™** and a continuous and efficient protection of the connected load it is recommended to check the batteries every 6 months, depending on the ambience temperature.

## 5.2 USER RESPONSIBILITIES

There are no user serviceable parts contained within the UPS so the maintenance responsibilities of the user are minimal. To maximise the useful working life and reliability of the UPS and its batteries, the environment in which the UPS operates should be kept cool, dry, dust and vibration free. The batteries should be hold fully charged.

## 5.3 ROUTINE MAINTENANCE

The UPS is designed to receive regular preventative maintenance inspections. These preventative maintenance inspections are essential to ensure that both the useful working life and the reliability of the UPS are maximised. When the UPS is commissioned, the commissioning field service engineer will attach a service record book to the front of the UPS and this will be used to record the full service history of the UPS.

Preventative maintenance inspections involve working inside the UPS, which contains hazardous AC and DC voltages. Only NEWAVE trained or agreed service personnel and authorised field service engineers are fully aware of all of the hazardous areas within the UPS.

During a preventative maintenance inspection the field service engineer will carry out the following checks:

- Site/environment conditions;
- Integrity of electrical installation;
- Cooling airflow;
- Rectifier operation and calibration;
- Inverter operation and calibration;
- Static switch operation;
- Battery status;
- Load characteristics;
- Integrity of alarm and monitoring systems;
- Operation of all installed options;

## 5.4 BATTERY TEST

The battery test takes approx. 3 minutes and should be performed only if:

- there are no alarm conditions;
- the battery is fully charged;
- mains is present.

The battery testing can be carried out independently of the operation mode (OFF-LINE or ON-LINE) and whether or not the load is connected.

The battery test procedure can be performed from the UPS front panel. See "Operation" Chapter 4.

# 6 Troubleshooting

## 6.1 ALARMS

In the event of an alarm condition the red LED-Indicator “Alarm” and the audible alarm will turn on.

In this case proceed as follows:

1. Silence the audible alarm by pressing the button "Reset".
2. Identify the cause of the alarm condition by means of the EVENT LOG in the MAIN menu.
3. In case of doubts please contact the nearest Service centre.
4. Fault identification and rectification information is given on the following pages.

## 6.2 MENU, COMMANDS, EVENT LOG, MEASUREMENTS,

In Chapter 4 there is a detailed description of the Menu, Commands, Event Log and Measurements that can be operated and displayed on the LCD. The List of Alarms and Messages are shown in the Annexe.

## 6.3 FAULT IDENTIFICATION AND RECTIFICATION

The major alarm conditions that will be encountered are:

Alarm Condition	Meaning	Suggested Solution
UPS FAULT	There is a fault in the UPS and therefore normal operation cannot be guaranteed	Call the authorised service centre for assistance
MAINS BYP/RECT FAULT	Mains power supply is outside prescribed tolerance	The input power to UPS is too low or missing. If site power appears to be OK, check the input circuit breakers etc. supplying the UPS
OUTPUT SHORT	There is a short circuit at the output of UPS (on load side)	Check all output connections and repair as required.
OVERLOAD	Load exceeds the UPS rated power	Identify which piece of equipment is causing the overload and remove it from the UPS. Do not connect laser printers, photocopiers, electric heaters, kettles etc. to the UPS
OVERTEMPERATURE	UPS temperature has exceeded the allowed value	Check the ambient temperature of the UPS is less than 30° C. If the ambient temperature is normal call the authorised service centre for assistance.
BATTERY CHARGER OFF	The attached battery and the battery charger set-up do not correspond or battery charger fault	Call the authorised service centre for assistance.
INVERTER FAULT	Inverter is faulty.	Call the authorised service centre for assistance.
SYNCHRON FAULT	The inverter and mains are not synchronised.	The frequency of the input voltage to the UPS is outside operational limits and the UPS static bypass has been temporarily disabled.
BATTERY IN DISCHARGE	Battery is near end of autonomy	Shutdown load connected to UPS before the UPS switches itself off to protect its batteries
MANUAL BYP IS CLOSED	Maintenance Bypass closed. Load supplied by mains	This alarm is only displayed if the UPS is on Maintenance Bypass

# 7 Options

## 7.1 INTRODUCTION

The UPS **PowerValue™** is provided with the following accessories:

- REMOTE SHUTDOWN FACILITIES;
- REMOTE SIGNALLING PANEL (RSP);
- GENERATOR ON FACILITIES;
- WAWEMON SOFTWARE FOR AUTOMATIC SHUTDOWN AND MONITORING;
- SNMP INTERFACES FOR NETWORK MANAGEMENT AND REMOTE MONITORING.

## 7.2 REMOTE EMERGENCY FACILITIES

The emergency stop facility **must** use a normally closed contact, which opens to operate the emergency stop sequence.

The emergency stop port X1 is located at the front of the UPS **PowerValue™** module. See Figure 3.5 for location drawing.

In order to allow removal, maintenance or testing of any remote emergency stop facility without disturbing the normal operation of the UPS, it is recommended that a terminal block, with linking facilities, be installed between the UPS and the stop button.

1. Use a screened cable with 1 pair (section of wires 0.6 mm<sup>2</sup>) and maximum length of 100 m.
2. Connect the cable as shown in Fig. 7.1


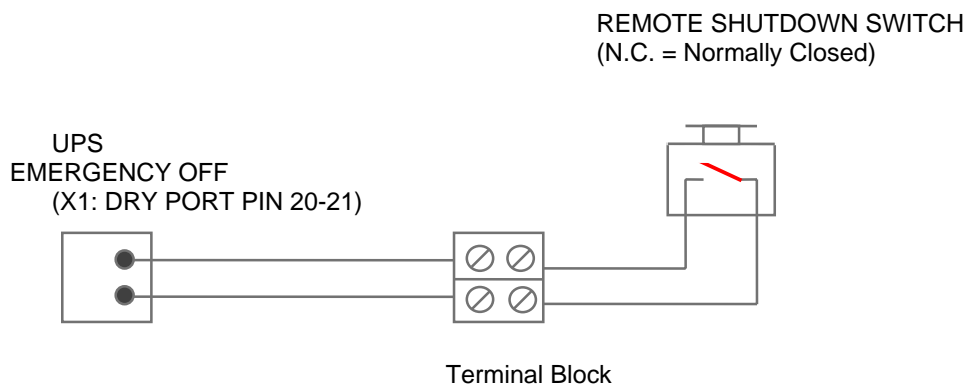


Fig 7.1 Drawing of the wiring for the REMOTE SHUTDOWN SWITCH.

### 7.3 REMOTE SIGNALLING PANEL (RSP)

The optional Remote Status Panel (RSP) may be used to display UPS status information up to a distance of 100m.

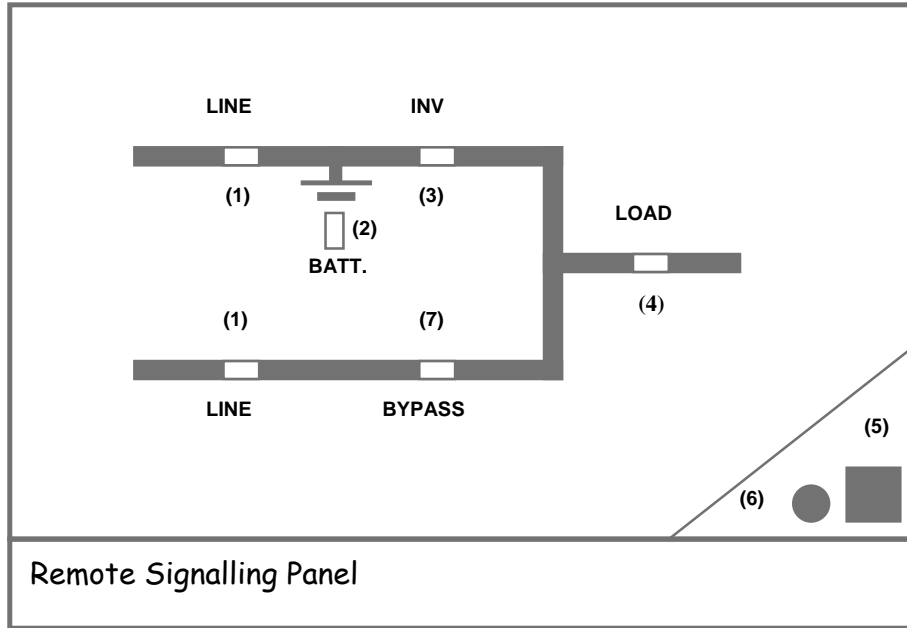


No.	INDICATOR	INDICATOR STATUS	MEANING
1	LINE	GREEN RED	Mains available Mains not available
2	BATTERY	GREEN YELLOW OFF	Battery OK Battery near the end of capacity No UPS supply or UPS on bypass
3	INVERTER	GREEN OFF	Load supplied by inverter Inverter supply not available
4	LOAD	GREEN RED FLASHING	Load is supplied Load is not supplied
5	ALARM RESET	Push button	Silence the audible alarm
6	ALARM	RED OFF	Alarm condition; check other LEDS for indication of mains and/or UPS status. UPS is in normal operation condition
7	BYPASS	RED OFF	Load is supplied by mains Load is supplied by inverter

Figure. 7.2: LED Indicators on Remote Signalling Panel (RSP)



### 7.3.1 How to Connect the Remote Signaling Panel (RSP)

- Provide a 0,7.5 mm<sup>2</sup>, shielded cable (max 100 meters);
- Do not connect shielding;
- On one end of the cable prepare the connectors for a Terminal block connection
- The other end of cable connect to the 6pin, Terminal Block inside the RSP-Box as shown in Figure 7.3
- Connect 25 pin D-type connector to the UPS Dry Port.

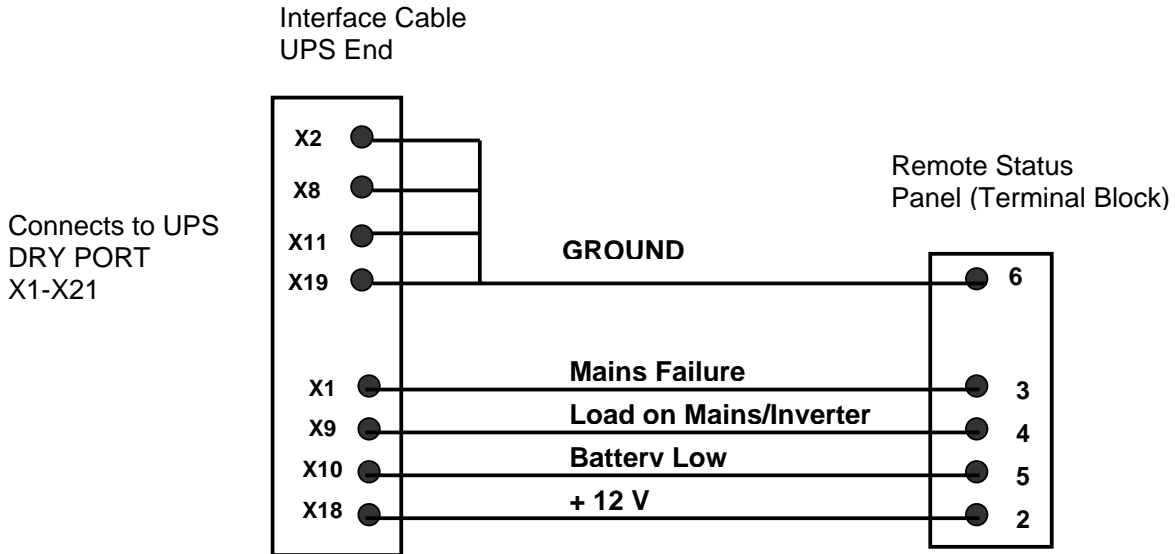

Connects Fig. 7.3: Connection of Remote Signalling Panel (RSP)

Details of all Dry Port connections are shown in Figure 3.10.

## 7.4 GENERATOR ON FACILITIES

The generator ON facility must use a normally open contact that closes to indicate that a generator is running and supplying input power to UPS.

When used, this facility disables the UPS static bypass and prevents the UPS from transferring the load onto the generator power supply.

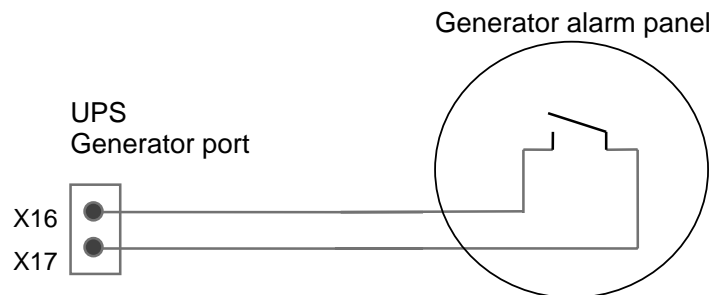


Figure 7.4: Generator ON Connection

## 7.5 WAVEMON SHUTDOWN AND MANAGEMENT SOFTWARE

### 7.5.1 Why is UPS Management important?

By combining a UPS with network management products, such as an SNMP protocol, System-administrators are guaranteed their data and their system will constantly be protected from corruption or data loss even in the event of an extended power failure or when batteries reach a critical low state. In the event of a power disturbance system administrators can also monitor their network from a central location, allowing an early detection of problems. In fact utility power is unreliable at times, ensuring that all network systems have constant power can be a difficult task. The situation becomes even more complex if systems are managed across a Local Area Network (LAN) or Wide Area Network (WAN) around the world.

When a power failure occurs action can be taken to protect the system and its valuable data. If no action is initiated by the operator, this event can seriously damage the system. The UPS software will react automatically in such a case and shutdown the operating system. NEWAVE has found it important to have a complete solution for its UPS and is able to offer a wide range of monitoring/remote controls for assuring the maximum protection degree to the NEWAVE customers.

### 7.5.2 Wavemon Shutdown and Monitoring Software

**Wavemon** is an external monitoring and shutdown software which was designed to operate with all NEWAVE UPS products, both with the DRY PORT (Relays) X1-X21 and SMART PORT (RS232) JD1.

The software packet consists of a CD ROM for most diffused operating systems (Windows, Unix, OS/2, DEC VMS, Novell, Apple), a standard connection and a user manual.

The 25 pin port with voltage-free contacts may also be used for automatic shutdown in connection with **wavemon**. It is necessary to provide a special cable to connect the 25 pin port of the UPS and the serial port of the server.

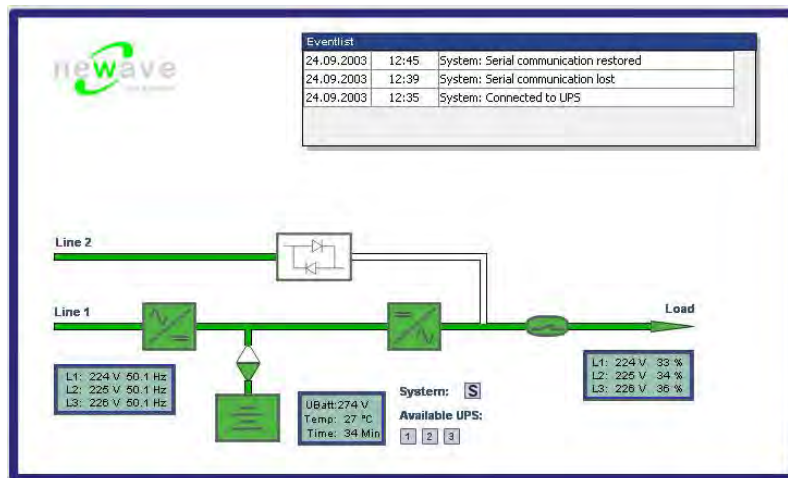


Figure 7.5. Monitoring image.

The main characteristics of **wavemon** software are:

- Automatic unattended master/slave shutdown in heterogeneous networks
- On-screen autonomy time / battery time countdown
- On-screen server log off and shutdown procedure
- Extensive logging of all UPS activity and power quality data, with timestamp
- Scheduled UPS economy mode, service mode, other systems status
- Graphical user interface for Windows compatible platforms
- Automatic unattended local shutdown
- Special software modules to close and save open MS-Office documents.
- Compatible for all optional modules like UPSDIALER, SNMP adapters, Temperature sensors, etc. The UPS-Management Software is a client-/server-application for networks and local workstations. Basically **Wavemon** consists of two parts: the server-module of the UPS-Management Software is **UPSMAN**, which communicates via RS-232 cable with the UPS. Working as

a background process the UPSMAN collects messages, received from the UPS. The UPSMAN interprets received messages and makes them available to the client-module **UPSMON** and to any SNMP-based management station.

When UPSMAN detects voltage variations or a power failure it can execute various so called system „event routines“, which for example may shutdown the server or send warning to connected users. These system event routines which are a part of the UPS-Management Software can be adjusted to your demands.

The UPS management software includes with every serial number the licence for using the UPS service on one server with one UPS and an unlimited numbers of connected WINDOWS workstations. When operating with two or more servers a licence for every additional server is required. It doesn't matter if the UPS service runs at that location or if the server is halted by a UPS service via remote command. The same regulations are applicable to the use of remote send/receive modules RCCMD and multiserver shutdown under NT, UNIX and other operating systems. The service programs are generally delivered as a single-licence. To use a single CD ROM to shutdown multiple servers you have to purchase additional CD license keys.

Parallel/redundant UPS systems are also manageable by the software.

The main principle is: let introduce a shutdown of a Server only when strictly necessary. A correct Parallel Handling has therefore to manage a parallel system as a whole and always considering redundancy. Following statements apply:

- Every alarm on any unit is immediately notified, but ...
- ... a reaction to a severe fault is introduced only when the minimum number of UPS –Modules necessary to supply the load exhibits an alarming situation.
- The real Battery autonomy time of the (whole) parallel system is computed continuously.
- Maintenance on a redundant unit may be executed without annoyance to the management system (supervisor).

In order to be managed, a NEWAVE UPS can be integrated into a network in two ways:

1. By means of the server which is being powered by the UPS and is integrated in the network. In most of the cases the server is used as sub-agent and you only need the Wavemon software without any SNMP Adapter. You need a standard serial connection between the RS232 SMART port of the UPS and the RS232 port of the computer/server.

2. In some situations it is preferable to interface the network via an SNMP adapter. By this way up to 50 computers can be shut down in a RCCMD environment. RCCMD (Remote Console Command) is an additional software module, which can be triggered by the SNMP device to executes a command (typically a shutdown command) on a remote system.

## 7.6 SNMP CARD/ADAPTER FOR NETWORK MANAGEMENT /REMOTE MONITORING

The **Simple Network Management Protocol (SNMP)** is a worldwide-standardized communication-protocol. It is used to monitor any device in the network via simple control language. The UPS-Management Software also provides its data in this SNMP format with its internal software agent. The operating system you are using must support the SNMP protocol. We offer our software with SNMP functionality for Novell, OS/2, all Windows running on INTEL and ALPHA, DEC VMS, Apple.

Two types of SNMP interfaces with identical functionality are available: an external SNMP-Adapter (Box) and an internal SNMP-Card. Both can manage a parallel system (N modules) and return either global values - which are consistent for the whole parallel system - or specific values from the single modules.

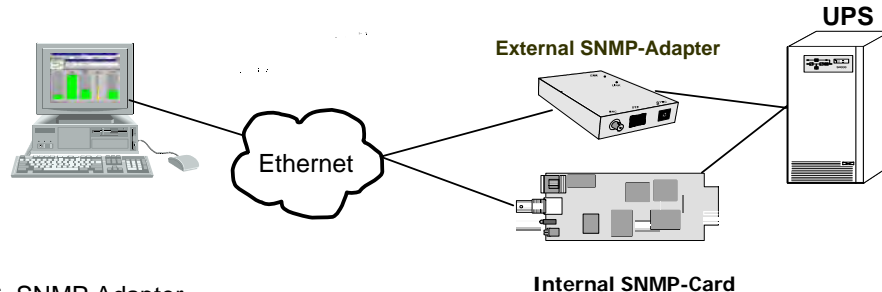


Figure 7.6 SNMP Adapter

The adapter may be configured via Telnet, HTTP (Web-Browser) or serial connection (Terminal). For normal operation at least one network connection (Ethernet) is required.

The SNMP adapter can be used, utilising the RCCMD send function, for an automatic network wide shut down or just for informing connected users. The shut down procedure can be initiated on a low residual battery autonomy time (downtime) or by a countdown timer which is started at the beginning of the alarm. A shut down is therefore possible without extra input from the operator, and is fully software controlled.

The small (125x70 mm) External SNMP adapter comes with following interfaces:



1. RJ-45 connector for 10/100 Base-T (autoswitchable)
2. Serial Port for configuration (COM2) or optional ModBus interface.
3. Error/Link LED for UPS status
4. Aux Port
5. DIP Switch
6. Serial Port to the UPS (COM1)
7. DC Supply (9 VDC or 9-36 VDC supply, depending on model);

Figure 7.7 External SNMP Adapter



The Internal SNMP-Card can be inserted into an appropriate extension slot of the UPS **PowerValue™**. This adapter communicates via the serial port of the UPS and makes a direct multiple server shut down possible without additional SNMP management software.

Figure 7.8 Internal SNMP Adapter

For detailed information please see Software Manual provided with the WAVEMON CD ROM.

**RCCMD - Remote Console Command module** for a multi-server shutdown. This stand-alone software module is designed to receive and execute a command issued by a remote device. Thanks to RCCMD it is possible to execute a shutdown in an heterogeneous multiplatform network. The new release RCCMD2 is an application available for all Operating Systems, analogous to Wavemon. Our SNMP Interfaces are compatible to RCCMD

# 8 Technical Specifications